



## Restarting the Linux ARM Player


1. Restart the player by navigating to the system menu and selecting the **Power** button.

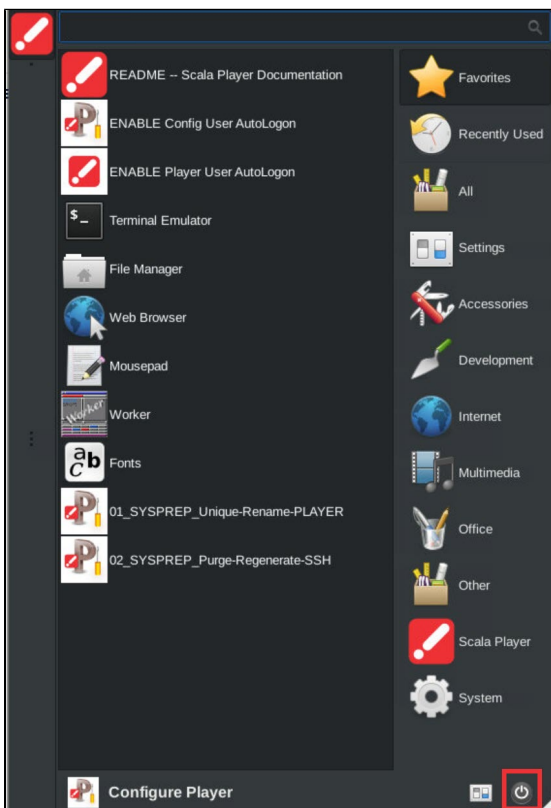

The *Logout* dialog appears.

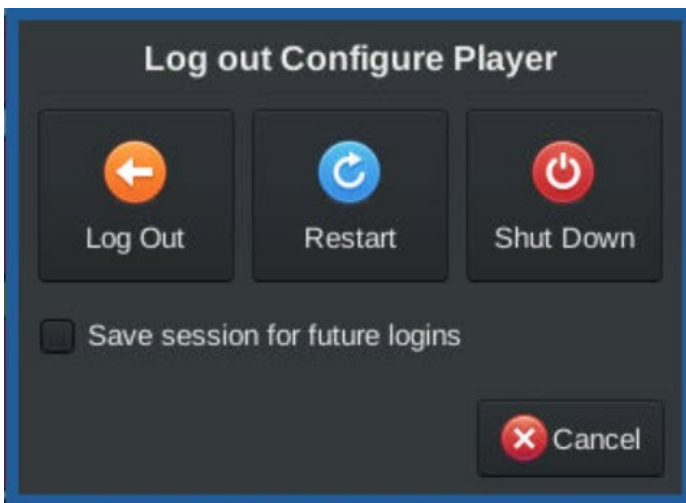

2. Click the **Restart** button.

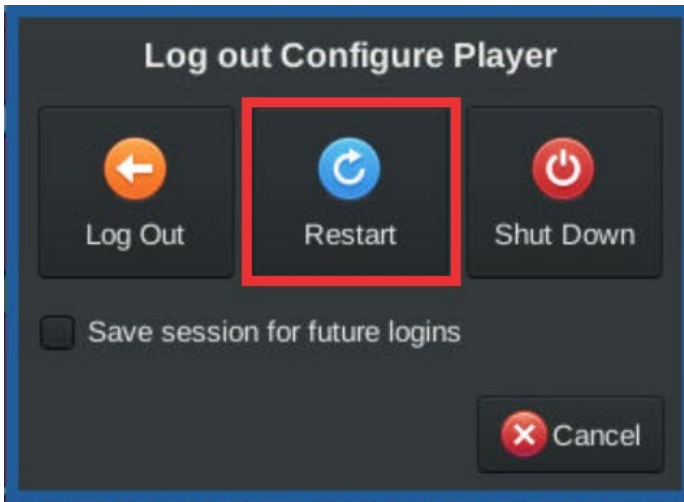

The system restarts.